




## VT9135 Installation Guide

### Step 1

Mounting Hardware is **NOT** included

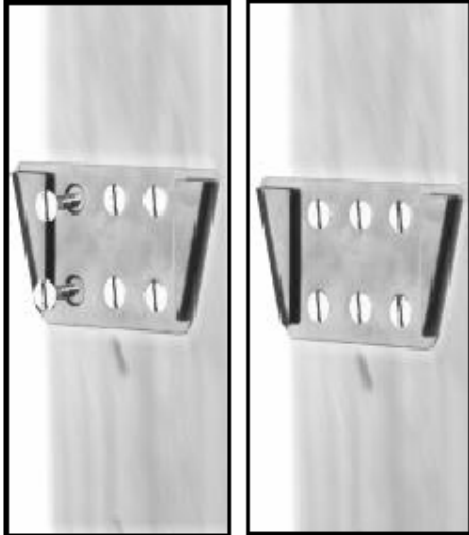

### Step 2



### Step 1

#### **Attaching the Mount to the wall surface**

Align 6 mounting screws into predrilled holes in mount. Mounting hardware is not provided.

For sheetrock/plasterboard applications, "molly" style expanding fasteners are recommended.

For installation directly into a known wood surface, #14 wood screws are recommended.


The installer must determine exactly what fastener is appropriate for that particular application.

### Step 2


#### **Attaching the VESA Bracket to the Rotating Device**

Attach the adapter bracket to the rotating piece of the 9135 using the (4) 1/4-20 x 1/2 Philips Pan Head Screws. Insert the screws in the center predrilled holes of the adapter bracket.

### Step 3

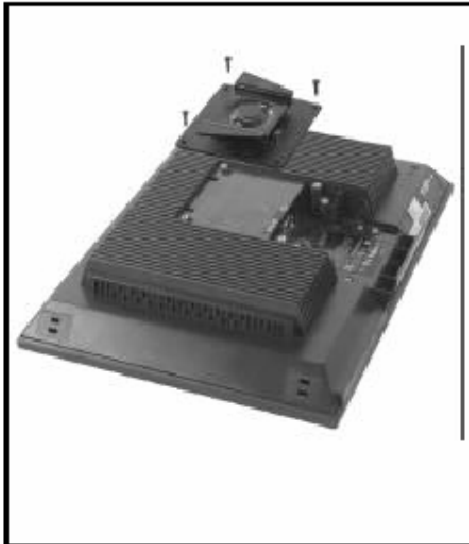

### Step 4

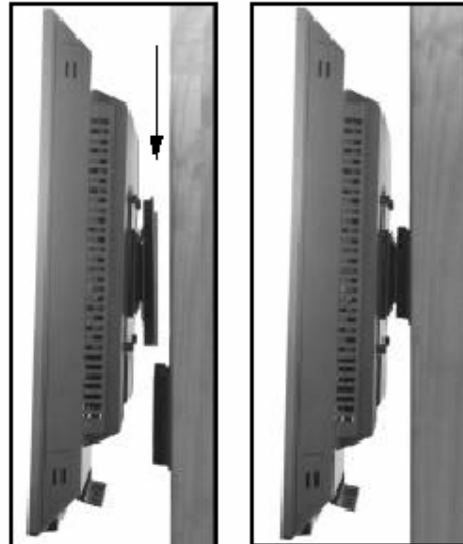

### Step 3

#### **Attaching the VESA Bracket & Rotating Device to the Flat Panel**

Carefully remove the base from the flat panel monitor. Align the adapter bracket with the hole pattern on the back of your LCD. Use the (4) four M4-12 Philips Pan Head Screws to attach the plate to the back of the monitor. Insert the screws in the outer pre-drilled holes in the adapter bracket.

### Step 4

#### **Attaching the Flat Panel to the wall Mount**

Slide the monitor into the wall mount. Be sure the rotating piece is thinner at the bottom and wider at the top.

**HEADQUARTERS**  
11529 Sun Belt Ct.  
Baton Rouge, Louisiana 70809

**Phone** 800.223.8050  
**International** 001.225.298.0300  
**Fax** 225.297.2440

**E-mail** sales@vartechsystems.com  
**Website** www.vartechsystems.com